



Controls

Front panel

- 1. POWER BUTTON
- 2. STANDBY BUTTON
- 3. Standby LED display
- 4. Disk compartment
- 5. Remote sensor
- 6. Display button
- 7. Volume control
- 8. Memory button
- 9. Mono / stereo button
- 10. Pause button
- 11. Playback
- 12. Stop
- 13. Open / close
- 14. Skip button (▶▶)
- 15. Skip button (◀◀)
- 16. Select button
- 17. Speaker setup button
- 18. DSP MODE button
- 19. Night button
- 20. Headphone jack

Remote control

- 1. STANDBY button
- 2. FUNCTION button
- 3. NUMERIC KEYS 0 to +9
- 4. CLEAR button
- 5. PLAYBACK button
- 6. STOP button
- 7. SETUP button
- 8. NAVIGATION ARROWS
- 9. ENTER button
- 10. SEARCH BACKWARD button
- 11. SEARCH FORWARD button
- 12. SKIP BACKWARD button
- 13. SKIP FORWARD button
- 14. SLOW/R button
- 15. SLOW FORWARD button
- 16. TREBLE button
- 17. BASS button
- 18. SURROUND button
- 19. VOLUME button LOUD/QUIET
- 20. SPEAKER LEVEL CHANGE button
- 21. MUTE button
- 22. TUNING UP/DOWN button
- 23. TUNER STATION SWITCH UP/DOWN button
- 24. A-B REPEAT button
- 25. TEST TONE button
- 26. REPEAT button
- 27. SEARCH button
- 28. PROGRAM button
- 29. BOOKMARK button
- 30. RANDOM MODE
- 31. CAMERA ANGLE button
- 32. RETURN button
- 33. ZOOM button
- 34. DISPLAY button
- 35. AUDIO MODE button
- 36. PAUSE button
- 37. RDS button
- 38. DIGEST button
- 39. DVD MENU button
- 40. AUDIO MENU button
- 41. MENU / TITLE button
- 42. SUBTITLE button
- 43. PBC button:
- 44. KEY LOCK button
- 45. EJECT button

Display

- 1. Dolby Surround Prologic display
- 2. CD play display
- 3. RDS display
- 4. Dolby Digital display
- 5. FM band display
- 6. Title display
- 7. Dolby 3 stereo display
- 8. Track display
- 9. Chapter display
- 10. 2-channel stereo display
- 11. Night display
- 12. DTS display
- 13. DSP operating mode display
- 14. Playback-1/A-B display
- 15. Station information display
- 16. Preset station display
- 17. FM stereo display
- 18. General display
- 19. Display of remaining time
- 20. Display of total time
- 21. Channel/decibels/milliseconds
- 22. AM band display
- 23. Left/right channel display
- 24. Display key lock

Rear view

- 1. AM ANTENNA
- 2. FM antenna
- 3. TV/AUX input
- 4. Video (audio) input
- 5. Audio (DVD) output
- 6. S-Video output
- 7. Coaxial digital audio output
- 8. SCART output
- 9. Mains cable
- 10. Video Out
- 11. Subwoofer preamplifier output
- 12. Speaker output



Safety instructions

● GENERAL

Please read these safety instructions carefully before putting the device into operation.
Always keep these operating instructions near at hand.
Heed all warnings labelled onto the device and specified in the operating manual.
Under no circumstances should you allow children unattended use of electrical devices.

● AMBIENT CONDITIONS

 
Protect the device against humidity and heat.
Make sure that no foreign bodies or fluids get into the device.
Do not place fluid-filled receptacles on the device.
Do not expose the device to dripping water or splash water.
If placed on furniture, the device's rubber pads might lead to changes in surface colour. If required, place the device on an appropriate protective cover.
Do not place open fire sources such as candles on the device.

● AC POWER SUPPLY

Always connect the device to an easily accessible power outlet (230V ~ 50Hz), which is located in the immediate vicinity of the device.

● DVD PLAYER

The DVD player is a Class 1 laser product.
The unit is equipped with a safety system preventing the emergence of dangerous laser beams during normal operation.
To avoid injury to the eyes, do not manipulate or damage the safety system of the device.

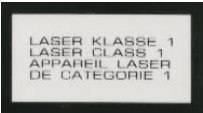

● MALFUNCTIONS

In case the power supply cord or the device is damaged, pull the AC mains plug immediately.
Under no circumstances should you attempt to open and/or repair this device on your own. Refer all servicing to our Service Centre or another qualified service shop.

● ENVIRONMENTAL PROTECTION

Used batteries do not qualify as household refuse.
The batteries must be disposed of at the designated collecting points.



● CLEANING AND MAINTENANCE

Prior to cleaning, unplug the mains plug from the outlet. For cleaning, always use a moistened, soft cloth. Do not apply chemical solvents or cleaning agents, as they may damage the surface and/or labelling of the device.



Preparation

Unpacking the unit

Remove all packaging material.

 
ATTENTION!

To avoid danger of suffocation, do not let smaller children play with the foil!

Inserting batteries into the remote control unit

Included in the scope of delivery are two AA batteries (1.5V)

- ▶ Push the cover of the battery compartment on the rear downward and off the remote control unit.
- ▶ Insert the batteries so that the negative pole of the batteries sits close at the springs.
- ▶ Push the cover of the battery compartment back on again.

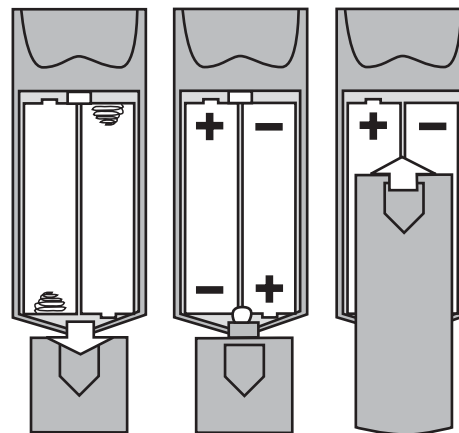


ATTENTION!

The enclosed batteries must not be charged, dismantled, thrown in a fire or short-circuited. Batteries may cause risk of death if swallowed. Therefore keep the batteries and the remote control in a place which is inaccessible to children. If the battery is swallowed, seek medical help immediately.



Connection to the TV set via S-VHS cable

 If your TV set does not have a SCART plug, you can connect it to the unit via a S-VHS cable (S-VIDEO jack). This provides you with a good image quality.
The sound transmission does not require a connection to the TV set , since the sound is transmitted to the speakers.
If you would like to transmit the sound to the TV set anyway, use an additional audio cinch cable.

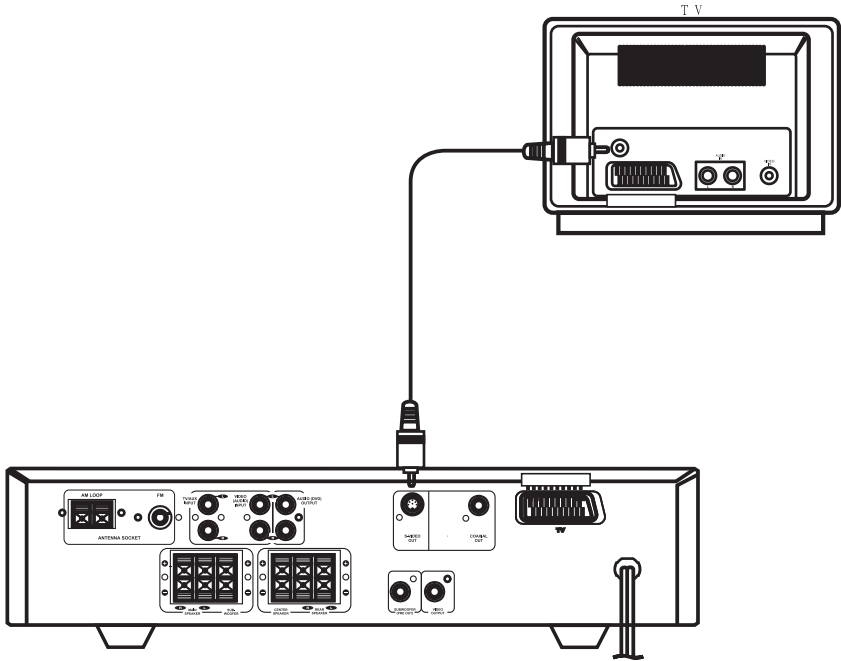

Connection to the TV set via video cinch cable

If your TV set does have neither a SCART connection nor a S-VIDEO jack, you can connect the unit also via a video cinch cable.

