

BAUHN® BLUETOOTH® PARTY SPEAKER E61203



AUS

Made in China:

MEDION AG
AM ZEHNTHOF 77
45307 ESSEN
GERMANY

VERSION V2.3

1
YEAR
WARRANTY

AFTER SALES SUPPORT 64240

AUS 1 300 884 987

www.medion.com.au

MODEL: MD 43989 12/2018

Instructions about these operating instructions



Thank you for choosing our product. We hope you enjoy using it.

Read the safety instructions carefully before using the device for the first time. Note the warnings on the device and in the operating instructions. Always keep the operating instructions close to hand. If you sell the device or give it away, please ensure that you also pass on these operating instructions. They are an essential component of the product.

Explanation of symbols

If a block of text is marked with one of the warning symbols listed below, the hazard described in that text must be avoided to prevent the potential consequences described there from occurring.

DANGER!

This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

WARNING!

This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

CAUTION!

This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE!

This signal word warns of possible damage to property.



This symbol gives you useful additional information on assembly or operation.

Symbol for direct current



The Australian Regulatory Compliance Mark (RCM) is a single compliance mark used by suppliers after establishing compliance with all applicable regulations, including EMC, telecoms, radiocoms, electromagnetic radiation (EMR) and electrical safety.

Proper use

The Bluetooth speaker is a home entertainment device and is used to play back music and audio from audio files sent via Bluetooth®.

The device is only intended for private use and not for industrial/commercial use.

Note that no liability will be accepted if the device is used for an improper purpose:

- Do not modify the device without our express agreement and do not use any accessories that have not been supplied or approved by us.
- Only use replacement parts

– accessories that we have supplied or approved.

– Comply with all the information in these operating instructions, especially the safety information. Any other use is improper and might cause personal injury or damage to property.

- Only use the device indoors.
- Do not use the device in extreme ambient conditions.

Safety information

- Keep the device and its accessories out of the reach of children.
- This device may be used by children over the age of 8 and by persons with reduced physical, sensory or mental abilities or by those without experience and/or knowledge, if they are supervised or have been instructed in the safe use of the device and have understood the dangers that result from it.

– Do not use the device if it shows signs of damage.

– Do not allow children to clean the device or perform maintenance tasks on it unless they are over 8 years old and properly supervised.

- Do not allow children younger than 8 years old near the device.
- Do not store any of the packaging material used (bags, polystyrene, etc.) within the reach of children.
- Do not allow children to play with the packaging.

Operational safety

DANGER!

Risk of electric shock!

There is a risk of electric shock due to live parts. Improper repair of the device can create the risk of electric shock.

- Check the device for damage before using it for the first time and after each use.

Setting up the device

NOTICE!

ambient conditions such as humidity and excessive heat can damage the device.

- Only use the device in a temperate climate and not in tropical conditions.
- The device can be operated at an ambient temperature of 0 °C to +40 °C and at a relative humidity

of 10% – 90% (non-condensing).

- When the device is switched off, it can be stored at -10 °C to +60 °C.
- If the device is brought from a cold location to a hot location, condensation can develop in the device. The condensation that develops can potentially destroy the device. When the device has reached room temperature, it is safe to operate.

Take care during set-up that:

- the device is not exposed to any direct heat sources (e.g. heaters);
- there is sufficient clearance from other objects and the device is not covered, meaning that adequate ventilation is always ensured;
- the device is not in direct sunlight;
- contact with dampness, water/splashes of water is avoided and no objects filled with

liquid – e.g. vases – are placed near the device;

- the device is not exposed to sprays or drips of water;
- the device is not operated close to magnetic fields (e.g. televisions or other speakers);
- naked flames (such as lit candles) are not placed near the device.

Power supply

The speaker is run on the integrated 3.7 V Lithium Ion battery (2000 mAh), which you can charge with the supplied USB cable in a USB port with an output current of at least 1 A.

Use of rechargeable batteries

Rechargeable batteries may contain combustible materials. If not handled properly, rechargeable batteries may leak, overheat, ignite or even explode, which can result in damage to the device and your health.

Please follow the safety advice below:

flash blue and will be ready for pairing with an audio output device.

- Now pair the host device speaker with the audio output device as described in the „Pairing mode“ chapter.

The paired speakers will not be listed separately on the device list on your audio output device, since they are already connected to the host device speaker.

After successful pairing, an alert tone will sound on all paired speakers, and the status LED will flash blue once after 4 seconds and then at 2-second intervals. The devices are now connected to each other and you can start playing audio.

Deactivate pairing function

The pairing function will remain active until you deactivate it again.

- To do this, proceed as follows:
- Press and hold for approx. 3 seconds on one of the paired speakers that is turned on until the red status LED goes out.

The pairing function is now deactivated and you can

WARNING!

Risk of explosion!

There is a risk of explosion if batteries are not handled properly.

- Do not throw the Bluetooth speaker into a fire.
- Never expose the batteries to excessive heat such as sunlight, fire, strong artificial light or similar.

Package contents

DANGER!

Risk of choking and suffocation!

Risk of choking and suffocation through swallowing or inhaling small parts or plastic wrap. The packaging is not a toy!

- Do not store any of the packaging material used (bags, polystyrene, etc.) within the reach of children.
- Do not allow children to play with the packaging.
- Remove the product from the packaging

and remove all the packaging material.

- Please check your purchase to ensure that all items are included. If anything is missing, please contact us within 14 days of the purchase.

The following items are supplied with your product:

- Bluetooth speaker
- USB cable
- Operating Instructions
- Warranty card

Start-up

The speaker battery must be completely charged before use.

The normal charging time of the battery is approx. 3–4 hours.

To charge the battery, proceed as follows:

- Open the cover on the underside of the speaker and connect the supplied USB cable to the micro-USB port 11.
- Connect the other end of the USB cable to the USB port of a PC or notebook.

The LED charging light 10 will light up red during the charging process. As soon as the battery is fully charged, the LED charging light will go out.



If the battery level is too low, an alert tone will sound and the speaker will turn off automatically. Charge the battery before you use the device again.

Operation

Turning the speaker on

- Turn the speaker on by pressing 9 on the top of the device until you hear a series of tones.

The status LED 8 will flash blue at 2-second intervals.

Connecting the device via Bluetooth®

Reconnect mode

After it turns on, the speaker will be in reconnect mode and will search for the most recently connected audio output device. If possible, the speaker establishes this connection automatically.

Turn on Bluetooth on the audio output device if you would like it connected to the speaker again.

During the search, the status LED flashes blue at 2-second intervals.

Device parts

- 1 Strap
- 2 Microphone
- 3 Speaker
- 4 Quick press: Increase volume, Keep pressed: Play next audio file
- 5 Quick press: Start playback/pause/resume, Keep pressed: Change from connected mode to pairing mode
- 6 Quick press: Reduce volume, Keep pressed: Play previous audio file
- 7 Activate/deactivate pairing function
- 8 Status LED

For call functions:

Quick press: Accept/end/reject call, Keep pressed: Reject call

- 9 On/off button

- 10 Charging LED
- 11 Micro-USB port
- 12 Reset opening
- 13 Fastening for cover

When the connection is established, a short alert tone will sound on the speaker, and the status LED will flash blue once after 4 seconds and then at 2-second intervals.

The devices are now connected to each other and you can start playing audio.

Pairing mode

After searching for several seconds, if no most recently connected audio output device is found, a short alert tone will sound and the speaker will switch automatically into pairing mode, which enables the connection of a new audio output device. The status LED will rapidly flash blue.

- Turn on Bluetooth on your audio output device and start the search for Bluetooth devices nearby.
- Select the speaker “MD 43989” from the device list on your audio output device and pair the devices with each other.

You will find further information about device pairing in the operating instructions of the audio output device concerned.



If a connection password is requested, enter “0000”.

When pairing is successful, a short alert tone will sound on the speaker, and the status LED will flash blue once after 4 seconds and then at 2-second intervals. The devices are now connected to each other and you can start playing audio.



If the speaker does not receive any signal within 8 minutes, it will automatically turn off to save battery power.

Changing from connected mode to pairing mode

Even if an active connection to an audio output device already exists, it is possible to connect another audio output device to the speaker without needing to turn the speaker off.

- To change from connected mode to pairing mode, keep 5 pressed until you hear an alert tone.

The status LED will rapidly flash blue.

- Now connect the devices as described in the „Pairing mode“ chapter.

Turning the device off

- Turn the speaker off by pressing and holding on the top of the device until you hear a series of tones.

The status LED will go out and the Bluetooth connection to a connected audio output device will be automatically terminated.

Playback controls

Audio playback can be controlled from both the audio output device and the speaker.

Pause/resume playback

- Press to start audio playback.
- Press during audio playback to pause playback.
- Press again to continue playback.

Play next/previous audio file

- Press and hold 4 to play the next audio file.
- Press and hold 6 to play the previous audio file.

Increase/reduce volume

- Press once or several times to increase the volume.
- Press once or several times to decrease the volume.



When the minimum or maximum volume setting is reached, a series of tones will sound on the speaker.

Call function via the speaker

If you have the speaker connected to your smartphone, various call functions are available to you using the speaker:

Incoming calls

If there is an incoming call, the ring tone of your smartphone plays through the speaker and audio playback is automatically paused.

- To reject the incoming call, press and hold for 3 seconds.
- To accept the call, press .

You will now hear the caller through the speaker and you can conduct the phone call through the integrated microphone 2.



Speak into the microphone at a distance of approx. 30–60 cm to obtain the best speech quality.

- Press to end the call.

Audio playback resumes automatically.

Problem	Solution
The device does not work	Charge the speaker battery completely. Make sure that the speaker is turned on.
No sound	Check the volume setting on the speaker and on your audio output device. Make sure that your audio output device is within range (max. 10 m). Check your audio output device to see whether the device is shown as connected. Pair the device again if necessary.
Speaker does not react	Perform a reset of the speaker.

Disposal

PACKAGING

The product has been packaged to protect it from damage in transit. The packaging is made of materials that can be recycled in an environmentally friendly manner.

DEVICE

The device is equipped with one integrated rechargeable battery. At the end of its service life, do not dispose of the device with normal household waste. If you can no longer use your electrical device, dispose of it in accordance with the legal provisions applicable in your country. This involves separating the materials in the device for the purpose of recycling and minimising the environmental impact.

Contact your local waste disposal company or your local authority for more information on this subject.

Technical specifications

Speaker	
Dimensions (H/Ø)	182 mm/67 mm
Weight	352 g
Output power	2 x 3 W RMS
Impedance	4 Ω
Connections	Micro-USB port (only for charging function)
DC IN	5V --- 1 A
Device protection class	IPX5
Ambient temperature (operating)	0 °C to +40 °C
Ambient temperature (storage)	-10 to +60 °C
Humidity	10 % - 90 % (non-condensing)
Integrated battery	
Battery type	3.7 V, 2000 mAh, Li-ion
Battery life	approx. 2–3 hours at maximum volume
Battery charging time when discharged	3-4 hours
Bluetooth®	
Bluetooth version	V5.0
Bluetooth profile	A2DP, AVRCP, HFP
Frequency range	2402–2480 MHz
Transmitting power	1.0 dBm
Range	approx. 10 m depending on ambient conditions
TWS	
Transmission standard	802.11n
Frequency range	5725–5800 MHz
Transmitting power	-15.5 dBm



Declaration of Conformity

MEDION AG hereby declares that the bluetooth speaker E61203 conforms to all relevant Australian requirements.

Service information

Please contact our Customer Service team if your device ever stops working the way you want or expect it to. There are several ways for you to contact us:

- In our Service Community, you can meet other users, as well as our staff, and you can exchange your experiences and pass on your knowledge there. You will find our Service Community at <http://community.medion.com>.
- Alternatively, use our contact form at www.medion.com/contact.
- You can also contact our Service team via our hotline or by post.

Opening times	Hotline number
Mon – Fri: 08:30AM to 06:00PM EST	☎ 1300 884 987
Service address	
MEDION Australia Pty Ltd. Chatswood, NSW 2067 Australia	



You can download this and many other sets of operating instructions from our service portal at www.medion.com/au/contact.php.

You will also find drivers and other software for a wide range of devices there.

You can also scan the QR code on the side of the screen, to download the operating instructions onto your mobile device from the service portal.

Legal Notice

Copyright © 2018

Date: 05.11.2018

All rights reserved.

These operating instructions are protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MEDION AG
Am Zehnthof 77
45307 Essen
Germany

Please note that you cannot use the address above for returns. Please always contact our Customer Service team first.