

# Quick Guide

## 8 GB USB Flash Drive P89069 (MD 86443)

### Included with your USB Flash Drive

Please check that the contents listed below are supplied with your package. Your package should include the following components:

- USB Flash Drive
- Quick Guide
- Warranty Card

### System Requirements

- Slot: USB port (USB 1.1/2.0)
- Operating system: Microsoft® Windows® 7 / Vista® SP1 / XP SP3

### Safety Instructions

Please read this chapter carefully and observe all listed notes. This ensures a reliable operation and long life expectancy of your **USB Flash Drive**. Keep these instructions with your device at all times. In the event that you transfer ownership of this device, please provide these instructions to the new owner. Please contact our Service Centre if you are experiencing technical problems with your device.

### Data Security

#### Note

Every time you update your data make back-up copies on an external storage medium. The supplier does not assume liability for data loss or damage to data storage units, and **no claims can be accepted** for damages resulting from the loss of data or consequential losses.

### Operational Safety

- Follow the operating instructions of your computer.
- Keep the device away from **humidity** and **avoid vibration, dust, heat**, and direct sunlight, in order to prevent operational interference.
- Never open the case. This would void all warranty claims and it could possibly cause the destruction of the unit.
- Do not allow **children** to play with electrical devices **without supervision**. Children do not always recognize possible dangers.
- Before operating the device after a **transport**, allow it to become acclimatized. High temperature and humidity deviations can lead through condensation to moisture build up, which can cause an **electrical short**. Fasten down the plug cover before transportation.

### Electromagnetic Compatibility

- While connecting the device, the **guidelines** for electromagnetic compatibility must be followed. Keep at least 1 meter distance from high frequency and magnetic sources of interference (TV, loudspeakers, mobile phones, etc.), to avoid operation disruption and data loss.

### Cleaning Instructions

Normally cleaning of this device is unnecessary.

- **Attention!** This device does not contain parts that must be serviced or cleaned.
- Make sure the USB Flash Drive does not become contaminated. Do not use solvents, corrosives, or spray cleansers. If necessary, clean the casing with a moist cloth.

### Recycling



Device

At the end of its life, the appliance must not be disposed of in household trash. Enquire about the options for environmentally-friendly disposal



Packaging

To avoid damage during transport, the device is stored in packaging. Packaging is produced mostly from materials which can be disposed of in an environmentally friendly manner and be professionally recycled. Contact your local authority waste department for further information.

## Getting Started

### Connecting

Remove the protective cover of the USB Flash Drive and connect the device with an available USB port.

The USB Flash Drive will be recognized and the operating system assigns the letter of an empty drive. Now you can use the device like a diskette drive (copy data, delete, etc.).

### Removing USB Flash Drive

With some operating systems it may be necessary to **sign off the device**. The installed USB Flash Drive is displayed in the taskbar. Right click with the mouse "Unplug or Eject Hardware" (1) and choose the appropriate entry (2):



The instruction for device removal will follow:

## Customer Service

### Errors and Possible Causes

**USB Flash Drive is not recognized:**

- Is the device connected correctly?
- Check in the Windows® device manager, whether the USB units are correctly linked. If necessary re-install the USB controller.

**Data cannot be read / written:**

- Did you format the USB Flash Drive with another computer? Different formats (FAT/FAT32/HFS) may be incompatible. Save the data and reformat the USB Flash Drive with a compatible format.

### Additional Support

If the suggestions in the above section have not solved your problem, please contact the service hotline and we will attempt to help you solve the problem. Before you contact the Helpline, however, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- If you have been given a customer number previously, please quote this.

#### Please note:

If the USB Flash Drive does not operate normally due to an electrostatic discharge, faulty data exchange or other error, please carefully disconnect the USB Flash Drive and reconnect it.



Copyright © 2010, All rights reserved.

Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Information in this document is subject to change without notice.

# MEDION®

Medion Electronics Ltd.  
120 Faraday Park, Faraday Road, Dorcan  
Swindon SN3 5JF, Wiltshire  
United Kingdom

Hotline (UK & N Ireland): 0871 37 61 020  
Costs 7p/min from a BT landline, mobile costs may be higher

Hotline (Rep of Ireland): 1 800 992508  
Fax: 01793 71 57 16

To contact us by email please visit the  
'Service and Support' section of our website  
at  
[www.medion.co.uk](http://www.medion.co.uk)