



User Manual

AMBIANO


BABY FOOD NUTRIENT BLENDER




Contents

Overview	4
Use	5
Device parts	6
About these Instructions	7
Explanation of symbols	7
Proper use	9
Safety information	10
Package contents	14
Preparations for Use	15
Attaching the small milling container	15
Attaching the large mixing container	16
Using the baby food nutrient blender	16
Milling container.....	18
Mixing container.....	18
Suggested recipe for mashed carrots.....	18
Storing food.....	18
Cleaning the appliance/accessories	19
Storage	20
Troubleshooting	20
Disposal	21
Technical data	22
Declaration of conformity	22
Service information	23
Legal Notice	24

A

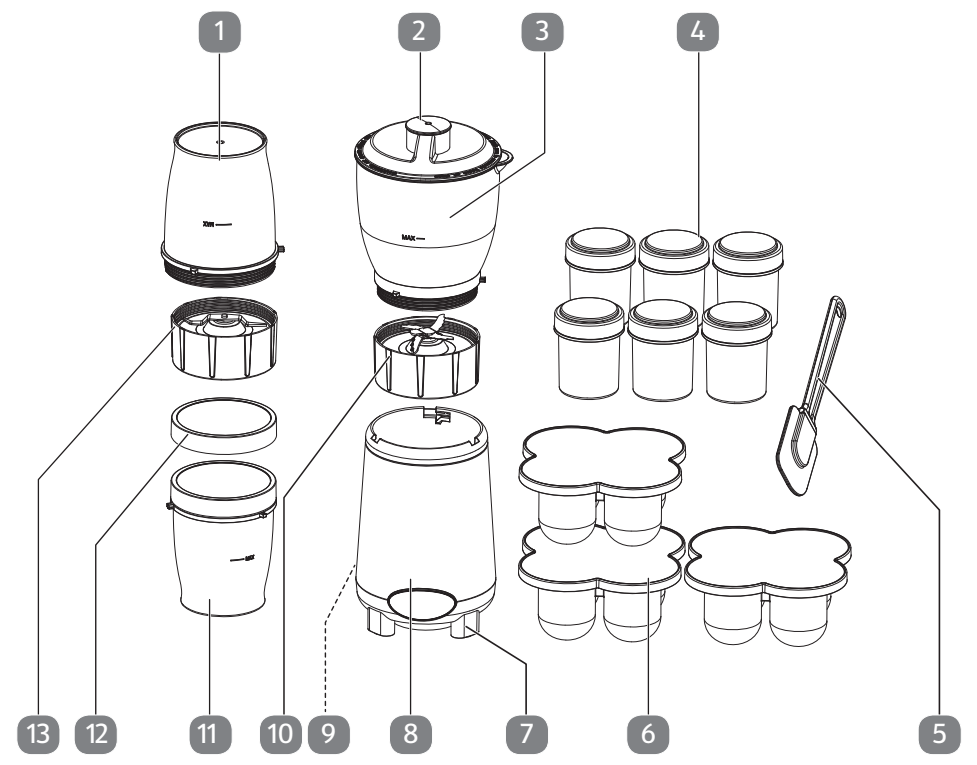


B

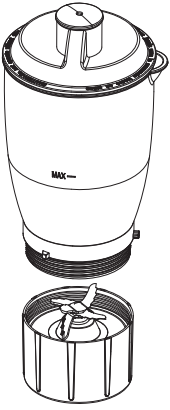


C





D

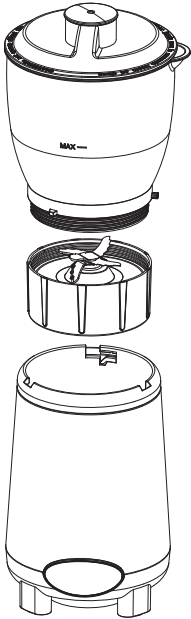

E

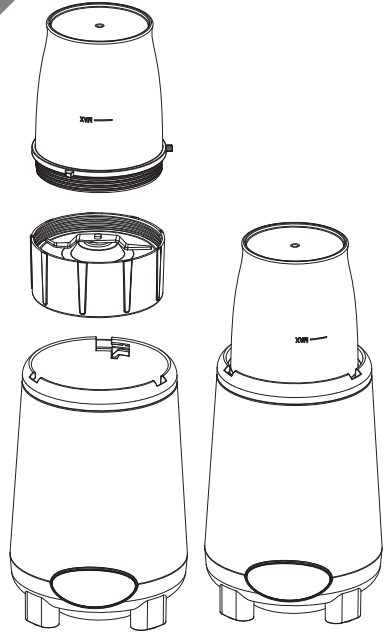

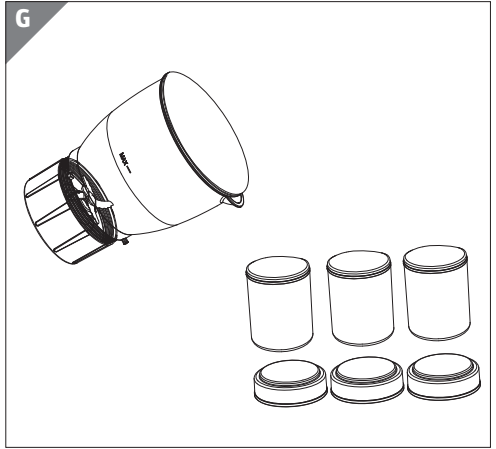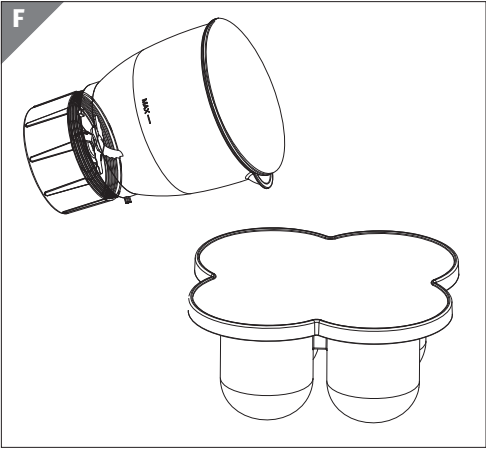

Appliance parts

- 1 Milling container
- 2 Splash-guard lid with filler opening
- 3 Mixing container
- 4 Storage container with screw cap
- 5 Spatula
- 6 4-section storage container with airtight cover
- 7 Power base
- 8 Motor block
- 9 Mains cable with plug (on the back, not shown)
- 10 Blade holder with star-shaped blade (four blades)
- 11 Milling container
- 12 Screw cap for milling container
- 13 Blade holder with flat cutter (two blades)



The appliance's type plate is on the bottom of the appliance.

About these Instructions



Please be sure to read these operating instructions carefully and follow all instructions given. The instructions will help you to operate the device reliably and help increase its service life. Always store these instructions near the device. Keep these operating instructions so that you can pass them on with the device if you sell it.

Explanation of symbols

If a block of text is marked with one of the warning symbols listed below, the hazard described in that text must be avoided to prevent the potential consequences described there from occurring.



This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



This signal word warns of possible damage to property.



This symbol gives you useful additional information on assembly or operation.



Declaration of conformity (see section ‘Declaration of conformity’):
Products that feature this symbol meet the requirements of the EC directives.



Warning: danger due to sharp edges!



Symbol for alternating current



Indoor use

Devices with this symbol are only suitable for use indoors.



Food-safe surface



Protection class II

Electrical appliances in protection class II are electrical appliances that permanently have double and/or reinforced insulation and do not have any connection options for a protective earth. The housing of an electrical appliance in protection class II that is enclosed in insulated material can partially or fully act as the additional or reinforced insulation.



Dispose of the device in an environmentally friendly manner (see section “Disposal” on page 21)



Proper use

This appliance is intended for pureeing and chopping ingredients to produce baby food. It can handle average portion sizes of food.

- This appliance is intended to be used in private households or in similar situations, such as the following:
 - in staff kitchens in shops, offices and other businesses
 - on agricultural estates
 - in hotel and motel rooms and other residential facilities
 - in bed & breakfast accommodation

The device is intended for private use only and not for industrial/commercial use.

Please note that we shall not be liable in case of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Follow all the instructions in these directions for use, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the product.

Safety information



WARNING!

Risk of injury!

Risk of injury due to improper use.

- This appliance must not be used by children. Keep the appliance and its mains cable out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children must not be allowed to play with the appliance.
- Always unplug the appliance from the mains if it is to be left unattended, and before you assemble, disassemble or clean it.
- This appliance should not be operated on an external timer or a remote control system.



WARNING!

Risk of choking and suffocation!

Risk of choking and suffocation through swallowing or inhaling small parts or plastic wrap.

- Keep the plastic wrap and removable small parts out of the reach of children.
- Children must not be allowed to play with the packaging materials.

**WARNING!****Risk of electric shock!**

The appliance must not be immersed in water or other liquids, or held under running water, because this could cause an electric shock.

- Unplug the appliance from the power socket if:
 - You are cleaning the appliance,
 - during periods when the appliance is left unattended
 - the appliance is no longer in use.
- Always hold the plug to pull it out, never pull on the power cable.
- Never expose the appliance to water drops or water spray.
- Do not use the appliance outdoors.

**WARNING!****Risk of electric shock!**

There is a risk of electric shock due to live parts.

- Only connect the appliance to a properly installed power socket. The mains voltage must match the technical data for the appliance.
- The power socket must be easily accessible so you can unplug the appliance from the mains quickly if necessary.
- Do not use an extension cable.
- Check the appliance and the power cable for damage before using the appliance for the first time, and after each use.
- Do not use the appliance if you notice that it, or its power cable, is damaged.
- Contact the Service Centre without delay if the appliance has been damaged during transport.

- Do not, under any circumstances, make any unauthorised modifications to the appliance or try to open a component and/ or repair it yourself.
- The power cable should only be repaired by an authorised repair workshop. Otherwise, contact our Service department, to avoid risks.
- Ensure that the power cable does not come into contact with hot appliance parts or other heat sources.
- The power cable must not touch the blades while the appliance is being used.
- Never open the housing or slide objects into the housing.
- Ensure the power cable does not become a tripping hazard – do not use an extension cable.
- Always unplug the appliance plug from the power socket before cleaning or servicing, or fitting or removing the accessories.
- Do not expose the appliance to extreme conditions. Avoid:
 - High humidity or wet conditions
 - Extremely high or low temperatures
 - Direct sunlight
 - Open flame.



Risk of injury!

Touching moving, sharp-edged parts can cause cuts.

- Avoid touching the moving parts.
- Never remove the splash-guard lid or mixing container before the blades have completely stopped moving.

- Keep hair, clothing, hands, cutlery, cooking spoons or similar away from the appliance while you are using it, to avoid injuring yourself or damaging the appliance.
- Only use the appliance when the splash-guard lid is on.
- Always disconnect accessories from the main appliance before cleaning.

**CAUTION!****Risk of injury!**

You may scald yourself if you use the appliance with food that is hotter than 80 °C.

- Do not fill the mixing container with hot or boiling liquids/foodstuffs.
- Always let foodstuffs cool before you put them into the mixing container.
- Never overfill the mixing container.

NOTICE!**Possible damage to the appliance!**

Using the appliance in a way that was not intended may damage it.

- Never switch on the mixing or milling function if the mixing container is empty.
- Do not kink the power cable or wrap it around the appliance. Unwind the cable fully when using the appliance.
- Place the appliance on a stable, level surface.
- Never place the appliance on the edge of a table – it could tip over and fall.
- Appliances connected to the mains during a thunderstorm may be damaged by power surges. For this reason, always unplug the plug if there is a thunderstorm.

- Never operate the appliance for more than 60 seconds, when pureeing, or 30 seconds, when chopping, to prevent the motor from overheating.
- If the blades get blocked, unplug the appliance and remove the blockage.
- Never use the blades to process hard, frozen foodstuffs.
- The appliance's blades are not suitable for chopping hard ingredients. Never fill the mixing container/milling container with very hard nuts, coffee beans or pieces of ice.

Package contents



DANGER!

Risk of suffocation!

Packaging film can be swallowed or used improperly. Therefore, there is a risk of suffocation!

- Keep packaging material such as plastic film or plastic bags away from children.
- Please check your purchase to ensure that all items are included. If anything is missing, please contact us within 14 days of purchase.

The product you have purchased includes:

- Baby Food Nutrient Blender, including:
 - 2 small milling containers
 - 1 screw cap for milling container
 - 1 mixing container with splash-guard lid
 - 6 storage containers with screw cap
 - 3 x 4-section storage container with airtight cover
 - 1 blade holder with flat cutter (two blades)
 - 1 blade holder with star-shaped blade (four blades)
 - 1 spatula
- Operating Instructions, including terms of warranty

Preparations for Use

- Remove all packaging materials.
- Before you use the accessories for the first time, and every other time you use them, clean them all with a soft cloth and washing-up liquid (see “Cleaning the appliance/accessories” on page 19).
- The first time you use the appliance, fill the container with clean warm water and select the chopping function, swapping between the two blade holders, to remove any residues that may be left behind after the manufacturing process **10** / **13** (see “Using the baby food nutrient blender” on page 16).
- Allow everything to dry thoroughly.
- Place the baby food nutrient blender on a level, non-slip surface.



Risk of injury!

Touching moving, sharp-edged parts can cause cuts.

- Avoid touching the blades.

Attaching the small milling container

See **Figure C**.

- Twist the blade holder **13** anticlockwise onto the milling container **1**.
- Place the milling container on a level surface, with the opening facing upwards, and fill it with the ingredients. Do not exceed the maximum filling level, marked with **MAX**, on the milling container.
- Then place the blade holder on the milling container opening and screw it on tightly by twisting it clockwise.

Use the milling container and the blade holder with the two blades for

- chopping meat and onions, for example
- chopping grains or seeds that you have previously soaked in water to soften them

Do not use it to chop hard foodstuffs such as ice cubes, coffee beans, dried pulses or nuts, or for processing liquids.

Attaching the large mixing container

See **Figure D**.

- Place the blade holder **10** on the mixing container opening **3**, at the bottom, and twist the threaded ring clockwise to screw it tight.
- Place the mixing container on a level surface, with the opening facing upwards, and fill it with the ingredients. Do not exceed the maximum filling level, marked with **MAX**, on the mixing container.

Use the mixing container and the blade holder with four blades for

- pureeing cooked ingredients
- mixing liquid foodstuffs such as milk products, sauces, juices, soups and milkshakes.
- mixing soft ingredients

Using the baby food nutrient blender



Risk of injury!

Injuries may result from using the appliance carelessly.

- Never use the mixing container **3** unless the splash-guard lid **2** is securely fitted.
- Before using the baby food nutrient blender, check that the splash-guard lid has been properly fitted onto the mixing container.
- Make sure the blade holder **10**/**13** is properly attached to the mixing container **3**/milling container **1**.

NOTICE!

Possible damage to the appliance!

The motor can overheat and get damaged.

- Never run the chopping function with the milling container for more than 30 seconds.

- Never run the mixing function with the mixing container for more than 60 seconds.
- Wait a few minutes to let the appliance cool down before using it again.
- Do not use this appliance to process frozen foodstuffs, or very hard ingredients (such as nuts).
Remove all hard kernels from fruit, remove bones and gristle from meat, and take the bones out of fish.



Chop larger pieces into approximately 1–2 cm diameter cubes before placing them in the mixing container, so that they fit without needing to be squashed in.

Process larger quantities in several small portions, rather than all at once.

- Only connect the appliance to a properly installed power socket. The mains voltage must match the technical data for the appliance.
- Place the milling container **1** / mixing container **3**, with the blade holder **10** / **13** facing downwards, on the power base **8**. Make sure the three lugs fit into the three recesses on the power base.

To start the chopping function, twist the container clockwise.

You can pour liquids, such as vegetable oil, into the filler opening in the splash-guard lid **2** on the mixing container when the appliance is running.

- Twist the filler opening cover so that the arrow points to the opened lock symbol. You will now be able to open the filler opening and pour the liquid in through it. Twist the cover until the arrow points to the closed lock symbol shows, to lock the cover.
- Once the food has been chopped or blended enough, wait until the blades stop moving.
- To cancel the chopping function, twist the mixing container/milling container anticlockwise.
- When you have finished processing the food, pull the plug **9** out of the power socket.



If bits of food (for example, if you're processing wet ingredients) remain stuck to the inside of the container, switch the appliance off and use the spatula supplied to remove them. Then put these pieces into the container and chop them with two or three bursts of pulses.

- Lift up the mixing container/milling container with blade holder, vertically, to remove it from the power base.

Milling container

- Place the milling container with the blade holder facing upwards.
- Twist the blade holder anticlockwise to remove it from the milling container. Then empty out the milling container.
- Store foodstuffs in the supplied storage containers (see **Figure F/G**).

Mixing container

- Place the mixing container with the blade holder facing downwards.
- Remove the splash-guard lid and empty out the mixing container.
- Store foodstuffs in the supplied storage containers (see **Figure F/G**).

Suggested recipe for mashed carrots

Accessories	Preparation time	Ingredients
Mixing container (400 ml)	60 seconds	180 g precooked carrots 270 ml water

- Chop the carrots into pieces, approximately 1–2 cm thick, and cook them before processing.
- Put the carrots in the mixing container, along with 270 ml water.
- Following the instructions above, chop the ingredients for 60 seconds.

Storing food

The storage containers with a screw cap **4** and the 4-section storage containers with airtight covers **6** can be used to store baby food in the refrigerator (for max. 3 days) and in the freezer (for max. 1 month), and for feeding your baby.

The milling container **1** / **11** with a screw cap **12** can be used to store baby food in the refrigerator (for max. 3 days), but not in the freezer compartment.

- Clean the storage containers, and sterilise them if required, before you use them for the first time, and every other time you use them after that.



Dispose of the containers as soon as they show signs of being worn out.

- Do not overfill the containers (max. 80 ml).
- Close the containers with the appropriate covers.

- Make a note of the contents, and the date on which they were put in the container, on a label, and stick it on the container.
- Store the filled containers in the refrigerator or freezer.

Cleaning the appliance/accessories



DANGER!

Risk of an electric shock caused by moisture.

The appliance must not be immersed in water or other liquids, or held under running water, because this could cause an electric shock.

- Never immerse the appliance in water or other liquids!
- Unplug the plug **9** from the power socket before cleaning the appliance.
- Do not clean the power base **8** in the dishwasher.



WARNING!

Risk of injury!

There is a risk of injury due to moving parts.

- Avoid touching the blades.
- To avoid injuries, use a washing-up brush or similar suitable piece of cleaning equipment to clean the blades.

NOTICE!

Possible damage to the appliance!

Delicate surfaces can be damaged if they are cleaned incorrectly.

- Do not use any harsh or abrasive cleaning agents or objects to clean the accessories and the housing.
- Unplug the plug from the power socket before cleaning the appliance.
- Remove the accessories.

Storage

- Use a mild cleaning agent, such as washing-up liquid, and a soft cloth, to clean the accessories.
- Clean the containers immediately after processing foodstuffs such as carrots or tomatoes, to prevent staining.
- Wipe the surface of the appliance with a slightly dampened, soft cloth.
- Clean the storage containers in warm water, with a drop of washing-up liquid and then rinse them under running water, or put them in the dishwasher.

Storage

If you are not going to use the appliance for a longer period of time:

- Unplug the mains plug
- Clean the appliance and the accessories
- Store the appliance in a dry, dust-free place, away from direct sunlight.

Troubleshooting


The product left our warehouse in perfect condition. However, if you identify a problem, try to solve it using the table below. If you do not succeed, contact our Customer Service department.

Problem	Possible cause	Troubleshooting
The appliance does not work.	The appliance is not plugged into a power socket.	<ul style="list-style-type: none">- Only connect the appliance to a properly installed power socket. The mains voltage must match the technical data for the appliance.
	The appliance has overheated.	<ul style="list-style-type: none">- Allow the appliance to cool down.- Contact Customer Service.
The appliance does not work.	The mixing container/milling container has not been attached correctly.	<ul style="list-style-type: none">- Ensure that the three lugs fit into the three recesses on the power base, and twist the container clockwise.

Problem	Possible cause	Troubleshooting
Container leaks	Blade holder not screwed onto the container correctly. Splash-guard lid does not close. Container too full; overfilled past Max marking.	<ul style="list-style-type: none"> - Twist the blade holder onto the container without tipping it. - Put the splash-guard lid on correctly. - Do not overfill the container.
Blade does not rotate	Blade is blocked by ingredients.	<ul style="list-style-type: none"> - Use the spatula to remove the blockage. Do not touch the blade with bare hands.

Disposal

PACKAGING

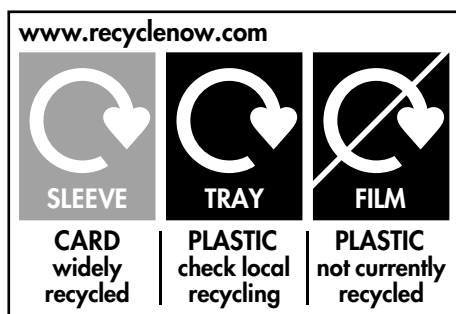

The product has been packaged to protect it from damage in transit. The packaging is made of materials that can be recycled in an environmentally friendly manner.




DEVICE (WITH & WITHOUT BATTERIES)

Old devices may not be disposed of with normal household waste. If you can no longer use your electrical device, dispose of it in accordance with the legal provisions applicable in your area. This involves separating the materials in the device for the purpose of recycling and minimising the environmental impact.

Take old devices to a collection point for electrical scrap or a recycling centre.

Contact your local waste disposal company or your local authority for more information on this subject.

Technical data

Power supply	220-240V~ 50-60Hz
Rated power	240 W
Max. fill quantity (mixing container)	450 ml
Max. fill quantity (milling container)	160 ml
Protection class	II 
Max. short-term operation	30 seconds (milling container) 60 seconds (mixing container)
Dimensions with attachment	11.8 x 12.7 x 30 cm

Subject to technical modifications!

Declaration of conformity

MEDION AG hereby declares that this product conforms with the essential requirements and the remaining relevant regulations:

- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- Ecodesign Directive 2009/125/EC
- RoHS Directive 2011/65/EU.

Service information

Please contact our Customer Service team if your device ever stops working the way you want or expect it to. There are several ways for you to contact us:

- In our Service Community, you can meet other users, as well as our staff, and you can exchange your experiences and pass on your knowledge there. You will find our Service Community at <http://community.medion.com>.
- Alternatively, use our contact form at www.medion.com/contact.
- You can also contact our Service team via our hotline or by post.

Opening times	Hotline number UK
Mon – Fri: 08.00 – 20.00	☎ 0333 3213106
Sat – Sun: 10.00 – 16.00	Hotline number Ireland
	☎ 1 800 992508
Service address	
MEDION Electronics Ltd. 120 Faraday Park, Faraday Road, Dorcan Swindon SN3 5JF, Wiltshire United Kingdom	



You can download this and many other sets of operating instructions from our service portal at www.medion.com/gb/service/start/.

You will also find drivers and other software for a wide range of devices there.

You can also scan the QR code on the side of the screen, to download the operating instructions onto your mobile device from the service portal.

Legal Notice

Copyright © 2018

Date: 19.04.2018

All rights reserved.

These operating instructions are protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MEDION AG

Am Zehnthof 77

45307 Essen

Germany

Please note that you cannot use the address above for returns. Please always contact our Customer Service team first.



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
VISIT US AT WWW.ALDI.COM

AFTER SALES SUPPORT

82587



GB

0333 3213106

National rate

IRE

1800 992508

free phone



www.medion.co.uk

MODEL:
MD 17852

08/2018

3

**YEAR
WARRANTY**